

Dalton Pro ATV Clutch Kit

2014-15 Polaris 1000 RZR XP (2 seat version)- Stock / Over sized tires, adjustable kit.

*For 4 seat model, Use kit # DUV P10XP4

Kit #: DUV P10XP

Components:

1) Dalton Ivory primary spring	(DPPS-IV)
*primary spring options available- see “set up guide” page	
1) Dalton Grey/Violet secondary clutch spring	(DPSS-GY/V)
1) set of Dalton Quick Adjust flyweights/hardware	(QP94-59)
6) steel flyweight thrust washers	(.250x.500x.030)
10) pcs.M5x 12mm long threaded set screw.	(1.2g each)
4) pcs.M5x 6mm threaded set screw.	(0.6g each)
1) pkg gold hollow steel mass rivets	(2.4g) part # DFRH-Y
1) pkg silver hollow steel mass rivets	(1.8g) part # DFRS-Y
1) pkg aluminum mass rivets	(0.85g) part # DFRA-Y
1) Dalton Custom Billet Helix (Private label w/2 sets of custom curve ramps)	(Part# XP1-2)

Tools:

- 1) Primary clutch puller bolt is recommended, a primary clutch puller makes for easier drive clutch service if you intend to do clutch work in future (maintenance), or remove the drive clutch for easier work and inspection. Polaris dealers have them or you can order Dalton part# DCP-C
- 2) Secondary clutch spring compression tool.

Description:

Adjustable clutch kit for the 2014-15 Polaris 1000cc RZR XP Sport Utility Vehicle (stock or over sized tires).

It is like having many kits in one !

One clutch kit that can be set up for different terrain, tire sizes and conditions means accurate clutch tuning for your situation. Improved acceleration, back shifting, and belt performance. It also means you don't have to wonder if you bought the “correct version” of a kit.

This kit includes Dalton's patented “Quick Adjust” flyweight system that allows you to add or subtract some of the weight from the flyweights, without even removing the flyweights from the drive clutch. The new “Quick Adjust” flyweights set in this kit was designed specifically for this application.

This kit also includes a new machined billet helix that is actually two helixes in one. The helix has two different sets of custom ramp curve profiles, making the kit extremely flexible for different tires, terrain, and conditions. This feature means that you will not have to buy another kit or extra parts to be tuned correctly if you make a special trip or use different tire sizes seasonally, etc.

- Ultimate RPM control (can be adjusted for modifications)
- Set up manual includes “set up instructions” for different applications.

PLEASE READ ALL INSTRUCTIONS CAREFULLY FIRST!

Please take the time to thoroughly read and understand all of these pages before continuing. It is a great benefit to you to get some basic understanding of the CVT drive system and how it works. This can help save your components, drive belts, as well as make your ride more enjoyable and trouble free.

WARNING

Clutch components should only be installed by factory trained mechanics and personnel with a complete knowledge of variable rate belt transmission systems or CVT's.

CVT clutches are assembled under spring pressure .DO NOT attempt to disassemble clutches if not experienced or qualified.

This is a performance kit and is intended for the use of experienced adult riders ,who are trying to obtain a higher level of performance for racing, etc. Dalton Industries has no control over the use, misuse, or installation of these components and assumes no responsibility for any injury or damage.

IMPORTANT !

Take the time to read the associated documents and set up instructions for the components. This kit contains various set up options and recommended settings for different applications.


INSTALLATION: (dealer recommended)

Important: Always remove the KEY from the ignition before working on clutches.

- 1) Remove left rear wheel to access CVT clutch area. Remove the cover bolts to remove the plastic cover shroud.
- 2) Take note of direction of belt before removal. Remove belt. Remove primary clutch center bolt. Keep the spacers on the bolt and set the primary bolt aside.
- 3) Thread the primary clutch puller into the drive clutch and remove drive clutch now. **Remove the 6 bolts and clutch cover plate. Be sure to look for alignment marks on cover plate or mark the clutch with a magic marker for orientation during re- installation. Be careful when removing cover plate bolts, the primary spring is under pressure.**
- 4) With the primary clutch cover plate off, and the spring removed, remove the flyweight pivot pin (note direction) and the stock flyweights. ****Take note that with the new adjustable flyweights kit you will be using a thrust washer on each side of the flyweight.**
- 5)* **Set up the flyweights** as described in this instruction manual for your desired application See **“Set-Up Guide”**
Take note of your set up guide and set up the flyweights, then install the flyweights into the drive clutch. Be sure to read the complete document before continuing.
**** Install thrust washer on each side of new supplied flyweights. (see next page)**

Always be certain that you keep track of the set screws....it helps to mark the clutch in number from 1-3 to keep track. Be certain to not cause an imbalance . Keep track of screws remaining. Make sure all screws go in all the way and bottom for secure fastening.(do not over tighten)

****Install Thrust Washers-** When installing Dalton Quick Adjust flyweight, it is **important** install the supplied thrust washers. One on each side of each flyweight. These Flyweights were designed to be used with these washers. These steel washers offer better, more accurate flyweight movement, and improve durability.

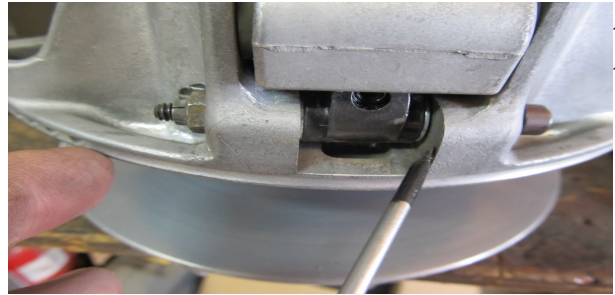

the
to

6) Install new primary spring into the clutch and re-install the cover onto the drive clutch (primary motor clutch). **Note : alignment marks.**

7) Re- install the primary and clutch center bolt and torque to manufacturers specs.(96 ft lbs)

8) **Remove secondary clutch.**

9) Remove the 4 torx screws and remove the factory helix from the clutch.

10) With a clutch spring compression tool or press, contain the spring retainer cap with light pressure, and remove snap ring so you can slowly and carefully release the spring pressure and let the retainer cap off.

11) Remove the stock secondary spring and replace with the supplied secondary clutch spring.

12) Be certain to properly align the “MASTER” spline for the spring retainer cap when re-installing.



13) * **Install new helix using selected ramp profile** - Install the proper ramp for your application.

(See “Set up guide”) The new billet helix has two helix ramps in it.

They are clearly marked. The correct ramp number is engraved directly on each ramp. Make sure the ramp you want is directly on the roller in the clutch (two of them, 180 degrees apart are the same and will go on the rollers)



see attached “Set Up- guide**” for recommended set up for your application.*

14) Install the torx screws to hold the helix using a drop of blue thread locker.

15) Install secondary clutch and torque to 36 ft./lbs. And install the belt.

16) Inspect cover shroud and gasket, and install cover.

Note: Our testing has shown best results with the factory belt, and calibration for this kit is associated with the factory belt . Using other belts may require rpm adjustment.

OVERVIEW - and general CVT tuning

There are books written on CVT clutch tuning and some in depth principals of controlling the rate of shift of the belt on belt drive systems. The following is a very general guide to help those unfamiliar with understanding some basic principles of the system.

The CVT system on your vehicle is a variable rate system. It is a two pulley system that gives different belt ratio as it shifts. As the belt goes up on the primary motor clutch, it also goes down into the driven (or secondary clutch) giving a higher clutch ratio and more speed.. Conversely, as the machine comes under load or slows down its speed, it back shifts to a lower belt ratio so that it will be able to pull away again after slowing or stopping. A system that is properly calibrated for its intended application will UP SHIFT as quick as possible *while still maintaining the proper rpm for the engines power curve. If a system is up shifted TOO quickly it lowers the engine rpm to a level below peak hp....if it up shifts too slowly it will rev higher during the shift phase than that rpm where the engine makes best power .* This same system should also BACK SHIFT properly. Back shifting properly means maintaining that optimum rpm as best possible, as the vehicle comes under load. Clutch components “control the rate of shift of the belt”.

*****It is very important** to realize that on most ATV/UTV situations, that the “**clutch phase**“(the time that the belt goes from low ratio to high ratio) is only for a distance of approximately 500 feet on hard pack at wide open throttle, or around 50 mph. **After** which, the belt is fully shifted, and clutch components have little effect on rpm or speed. Once the belt is to the top, it is to the top... **and the engine starts to build rpm as the belt is out of ratio.** Clutch components cannot control rpm after full shift out is achieved. *Clutch components change the rate of shift of the belt...once the belt is shifted out, clutch kits cannot offer top speed increases.*

When testing for clutch RPM, it is important to check rpm at around 250-300 ft of distance on a wide open throttle run (while the clutches are still not fully shifted).

****-** *The 2014 RZR xp1000 operates best in the zone of 8200-8600 RPM. This wide power band is good because we have noted that the belt runs at a lower rpm when hot. Be certain to properly warm up the vehicle belt and clutches before testing rpm.*

Different tuning components can control the rate of up shift and back shift of the belt to maintain a desired rpm range. The goal of a CVT clutch system is to keep the belt in the proper ratio at any given speed and load situation. The factory has set up your system to be a decent “all around” calibration, that means it can ride in different terrain, or haul a trailer, or maintain decent emissions, and be a “general” calibration that the factory feels is a suitable compromise in many respects .Many users of these vehicles, for various reasons, like to change the desired effects and purpose of their machine to a more case specific application, whether it be over sized tires for mud, drag racing, sand applications, pulling competition, high altitude operation where less power is available, different engine(rpm) characteristics from engine modification etc. In different situations like this , performance can be optimized by re- calibrating the shift pattern of the CVT.

An example of a need to change the shift pattern would be adding larger mud tires. When installing larger tires there are a couple of factors that effect the clutching. The larger tires result in taller gearing. With a taller gearing situation, the last thing you would want to do is up shift too fast, as you are already starting off in a higher final drive ratio from the tires. The other factor is rotating mass. Heavier , large diameter rotating mass is a real negative for acceleration. *Although most experienced tuners know that a atv/utv with over sized tires will never be as quick as one with stock lightweight tires, clutch tuning can help compensate for some of the losses and help restore performance.*

The Clutch Tuning Components (General tuning info)

Heavier Weights- Will up shift quicker and thus **lower rpm** during the “clutch phase”.

Depending on the situation, sometimes you can get away with a quicker up shift. It is important to remember that the primary spring is the opposing force to the clutch weights, and that changing the rating of the primary spring can effect the amount of force required from the flyweights.

Lighter weights- Slower up shift during the **clutching phase**. Slower up shift **higher rpm**.

Note: Remember, sometimes different curvature and profile can make total GRAMS irrelevant to each other. ***You can only compare flyweights by grams if the curve and distribution of mass of two flyweights are the same.*** Curvature and distribution of mass are also tuning methods.

Springs – In general, stiffer springs slow the up shift. Softer springs up shift faster.

Primary springs are in the front motor clutch. Sometimes primary springs are compared on load charts. **The initial load (first part of the compression)**, of a **primary spring** controls **engagement RPM**. Primary motor clutch springs are the principal control of engagement rpm. Sometimes a stronger compressed load rating spring (second part or load listing of a primary spring on a spring load comparison chart) can allow the use of more flyweight and the combination is effective for a situation, but not all situations are the same.

Secondary springs are more related to controlling back shift, torque sensing. A spring is another type of tuning component. A spring is always chosen relative to the flyweight and the rest of the system. Sometimes the stock springs are fine, other times re-calibration requires one or both springs in the clutches to be changed to suit the application.

Helix – Helix ramps are one of the controlling forces of the rate of shift of the secondary.

A **steeper** helix ramp up shifts faster (thus lowering operating rpm during the clutch phase).

A more **shallow** helix ramp up shifts slower and thus allows more rpm. It also back shifts faster.

Remember, never focus on **ONE tuning part**, different secondary springs, etc effect the required helix.

It is NOT that quicker or slower up shift is BETTER....it is totally dependent on the situation. The goal is to achieve the best shift pattern for the application, so that *the engine stays in its best rpm zone*.

- **RZR 1000 XP** make best hp at 8200-8600 rpm during the clutch phase.

(see “clutch phase” in overview).

Dalton Pro Quick Adjust Cam Arms - Adjustable flyweights.

Dalton's patented quick adjust method means that you can add and subtract some of the flyweight mass from the main body of the flyweight without removing the weights from the drive clutch.

There is one rivet hole at the tip of the flyweight that can be used to change the “range” of the flyweight with different optional mass rivets (this rivet must be done with flyweight removed from clutch). Where the weight is located can change the shift pattern.

The threaded passage can hold up to 3 of the supplied threaded set screws that weigh 1.2 grams each.

3.6 grams can be* ***added or subtracted by simply turning the clutch so that the desired weight is up at the top, and using the supplied T-handle Allen key to add or subtract set screws thus changing the total mass of the flyweight.***

Sometimes, for example, switch from one application or terrain to another, you could adjust your clutch to the recommended setting by simply removing the plastic cover shroud, and make weight adjustments (according to instruction sheet), then re-install the plastic cover. No puller or primary clutch disassembly required. Set up and guidelines are on following pages.

SET UP GUIDE – RZR XP 1000 (2 seat version)

Primary spring

Ivory (DPSS-IV) This is the most popular spring and thus the one included in this kit. In this particular flyweight configuration, the **Ivory will engage very similar to stock**. It does, however, have different fully compressed load. There are many primary spring tuning options available on our website. **Always use the provided primary spring or the *optional one listed**. If you need more info contact us.

A popular **OPTIONAL spring for this application for some rock crawling and slow speed operation would be the optional **Orange/Green (DPSS-O/G)** In this application , the Orange/green engages at a lower rpm, or sooner. This spring does have the required fully compressed load rating for this kit and instructions.*

Secondary Spring

Secondary springs are tested for efficiency for the application. In this application **always use** the provided **Grey/Violet (DPSS-GY/V)** secondary spring.

Helix - Pay attention in your category for the proper helix ramp selection for your application. They are clearly **marked on the edge of the billet helix** “C-1” or “C-2”. The chosen ramp is used right at the roller location when you install it. Curve 1 is a steeper ramp. Curve 2 is more shallow.(see previous)

Set Up Guide RZR 1000 XP (Standard/Stock vehicle)

Use TIRE SIZE FIRST, then the provided info. **Always use both springs provided**, and the flyweight set up and helix listed for your application.

Stock Tires (28-29") – Stock machine, 0-3000' elev.**

Most applications - QP94-59 base weight, + Silver steel rivet (1.8g) + 2 long set screws* in each flyweight, and use C-1 helix ramp. Most stock tire general mixed use trail riding.

**For some 28" that lighter and measure smaller use 1.8g + 3 long set screws.

3500-5000' elev. - (Trail use) aluminum rivet + 1 long + 1 short screw in each flyweight* C-1 helix.

3500-5000' elevation- (Sandy terrain use) aluminum rivet +1 long+ 1 short set screw*+ C-2 helix ramp.

5000+ elevation - Use the base weight with no rivet for first test. Start with 2 set screws in the threaded passage of each flyweight. Use C-2 helix ramp. Test RPM *

Sand applications – Most often use C-2 helix ramp. (Sand is speculative..some is deep dry sand while others is desert roads and compact beaches, etc) For most sand riders, start with 1.8g steel rivet and 2 long screws and test. Remember that sometimes shift rpm is a bit different with a hot belt. Different paddles and sand types can make this very speculative. It is easy to adjust.

29.5 and larger tires - Stock machine, 0-4000' elev.

QP94-59 base weight + 1.8g rivet + 2 long set screws in each flyweight.

C-2 helix ramp. For higher elevations with larger mud tires start with no rivet and 2 long set screws.

*Tire weight, actual size, elevations, terrain type is very speculative. Dalton's Patented “Quick Adjust” makes it easy to test and adjust the flyweights if you like to fine tune on your own. If you are getting on the rev limiter early in the run it is easy to add weight. If rpm low, remove weight. See following page.

CVT Clutch Tuning

We have given you the guidelines for many applications. There can however, be some varying terrain, tire weight, and conditions. Individual vehicles themselves vary in output. There are ways to fine tune small adjustments that are quite quick and easy.

There are some overlapping ways to tune rpm. For instance, if you are running in the helix position C-1 and move the helix to C-2 it will increase rpm. If you were already running in C-2 and remove weight from the flyweights it will increase rpm.

In another example, if you are hitting the rev limiter on take off, you could need to add weight so that the clutches up shift faster and lower the rpm.

If you get on the rev limiter for any reason right after take off, add a set screw (or half screw*), or next heavier rivet in the tip of the weight. Try using set screws first. Remember though, that sometimes it is normal to have a slight bit of this when the belt is cold.

More notes on HIGH ALTITUDE - High altitude is less oxygen, and even though modern fuel injection can lean out the fuel and keep the mixture ratio corrected, there is less oxygen, and less fuel which equals less hp. You do not want to up shift too quickly. If you spend a lot of time at very high elevations you may want to experiment. Always try to calibrate for where you do most of your riding.

Special modifications? – There are heavier tip rivets included for things like extra hp add ons, or smaller tire sizes, etc...and more available, but if doing mods, expect to test.

If you have a modified machine that have special features that effect the operating rpm of the engine, particularly long duration camshafts or big bore kits, you must work closely with your engine shop to find the peak rpm requirement of the engine, etc. In these instances there will be a wide variance in requirements of the clutch shift pattern. You should consult the specific engine shop for recommendation as testing clutch components on your own will most likely be required. There is no way we can accurately test each of these situations. This is the nice feature of an adjustable clutch kit.

Using the Quick Adjust set screws

This can be done on the bench for initial set up, and as mentioned earlier in the set up guide, it can be adjusted later while the flyweight is still in the clutch.



- 1) **Carefully** install the set screw into the threaded passage. Be careful, as the small M5 screws can easily be cross threaded. Wind the set screw all the way in until it is snug at bottom of threads.
- 2) Add additional screws as required, always bottoming on the one inside.

Important: be sure to keep track of what you are installing and where it is installed. It helps to mark the clutch with a permanent marker from 1-3 to be sure you install the same amount of set screws.

For “installing and removing tip rivets” see last page.

Some notes on the 1000xp

Belt Burning

This vehicle is fast, and a very popular model for sport use. Power is good, but proper operation, and calibration of the CVT can help certain situations.

Before we ever tested a 1000 RZR we had already heard of quite a few people seeming to have early belt issues. The factory sends the clutching for what they refer to as general purpose, but there is a wide variety of uses for the vehicle. Case specific clutch tuning can help make the CVT system more efficient for what you do. This is a very flexible kit that allows adjustment. There is a detailed guide to get you started.

Some people have some experience, and like to do their own clutch tuning. There is certainly nothing wrong with that, but we sometimes hear that they only consider rpm or drag race results, etc.

Care must always be taken to consider the side effects of changing clutch calibration.

It is important not to neglect things like “back shifting of the belt as the vehicle comes under load”.

Proper calibration of the CVT system for your application can reduce belt temperatures and belt problems. This kit is adjustable in both the primary and secondary clutch, and allows you to be better calibrated for different situations.

If you are having belt problems, proper CVT calibration like this kit can help.

There are also other things that could contribute to belt life issues, things like “not using **low range**” when you should.

This vehicle comes from factory with very large 29” radials, as well as final drive gearing that will allow very high top speeds. The side effect of that is the clutch system can strain in load situations from a take off in high range.

ANY time you are operating at low speeds or in load conditions you should use low range in the gearbox.

Example: The vehicle is being operated in tight woods trails at approximately 10- 14 mph average.

- If you use high range for slowly crawling around at these speeds, the belt stays down on the center hub of the primary a lot of the time. It will hardly up shift the belt to achieve that speed in high range. The belt is wrapped around a small diameter hub on the primary (motor) clutch.
- if you shift the gearbox to low range and travel that same speed, the belt will be shifted up mid way on the primary motor clutch, where it has a much better (larger diameter) grip surface. This also puts the flyweight in a better leverage position and the result is less slippage of the belt (and thus lower clutch and belt temperatures).

Running around at slow speeds or load conditions in high range can easily overheat the belt, and it may not fail immediately, but may later on. You WILL have better belt life if you practice using low when you should.

2014 models should also consult the local dealer. There are upgraded CVT clutch housings coming on the 2015 model that have increased belt cooling capability (we have been told at the time of this printing).

Installation and removal of Mass Rivet (tip weight)



- 1) Push the rivet ALL the way into the appropriate hole in the tip of the flyweight.
- 2) Using a **large** shop vise hold the weight in a manner in the vise that holds the rivet all the way through the hole (The rivet should expand and be pressed).
- 3) Squeeze/expand the rivet. Be sure to use enough force to fully expand the rivet, some of the larger solid steel ones need a large vise with very strong force to fully expand. **Place all rivets pointing the same direction**
- 4) **Be certain to compress this rivet to be less than the width of the roller path up inside the spider assembly. . (usually .500 “ total compressed length), but castings vary)** If you are uncertain, install flyweight and cycle it up to see if the rivet clears. You canpeen them to a finish length if they are already mostly compressed/expanded.

For later removal of rivets if desired, use the following procedure:

- 1) Mark lightly the center of the flush side of the rivet with a center punch.
- 2) Using a 3/16 “ drill bit, drill approximately **half** way into the rivet.
- 3) Insert a flat ended punch with a straight shaft of 1/8” diameter into the drilled hole and tap the rivet through the hole to remove.

Thank you for choosing Dalton Industries !